


Installation manual

Part nr. 902850-02


Mobile stand

For the BalanceBox®650

The contents of the box

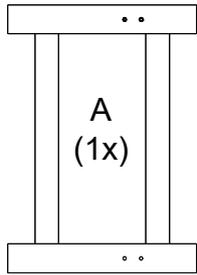

A
(1x)

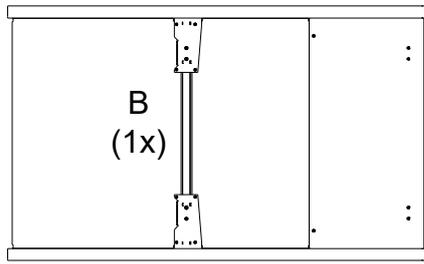

B
(1x)



H
(10x)



I
(10x)



J
(4x)



K
(12x)



C
(1x)



D
(2x)



E
(2x)



F
(1x)
5mm



G
(1x)
10mm




L
(1x)
12mm

Safety Instructions




1

Choose frame height and adjust (● 5 mm) refer to separate instruction

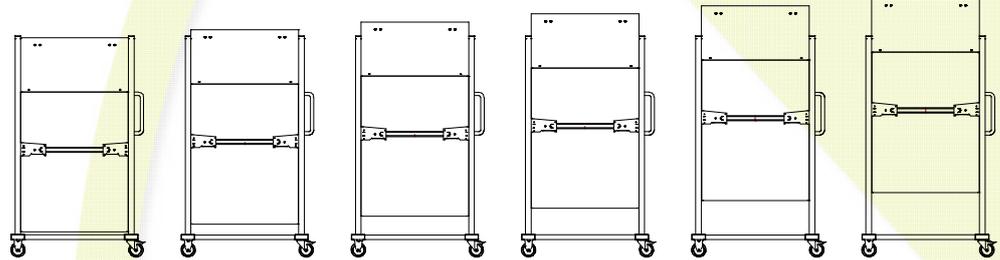


2

Assemble the wheels on the wheel frame, **ADD 2 WASHERS FOR EXTRA HEIGHT**,
Note: Wheel (E) with brake goes on the side with the sticker. **TIGHTEN WELL** use 12 mm pipe-wrench (L)

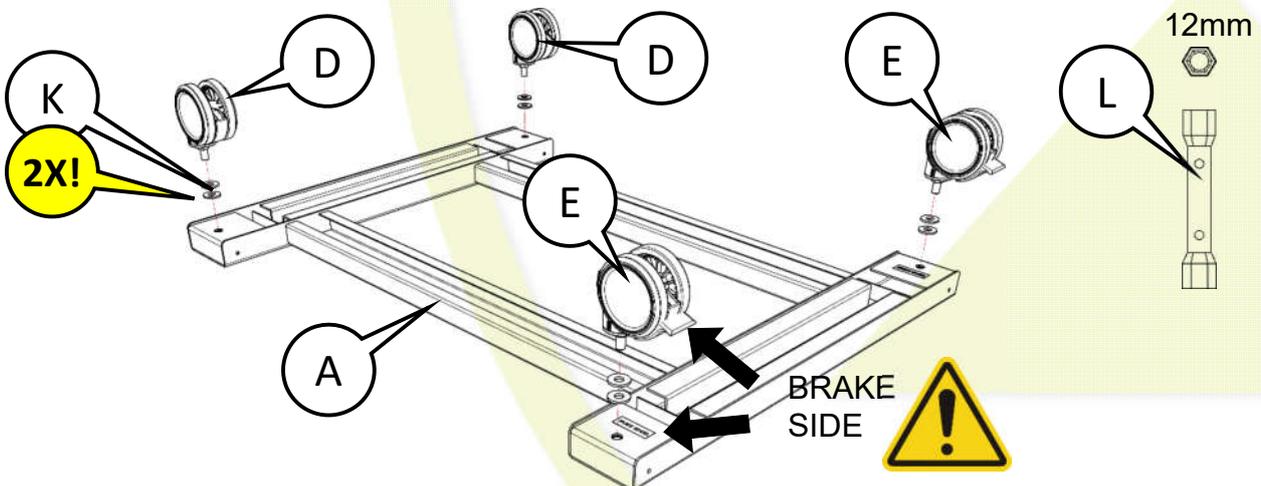


1


3 Assemble wheelframe (A) and top frame (B) from the bottom. Match the left (L) and right (R) labels on wheelframe and topfram, tighten well (● 10 mm)

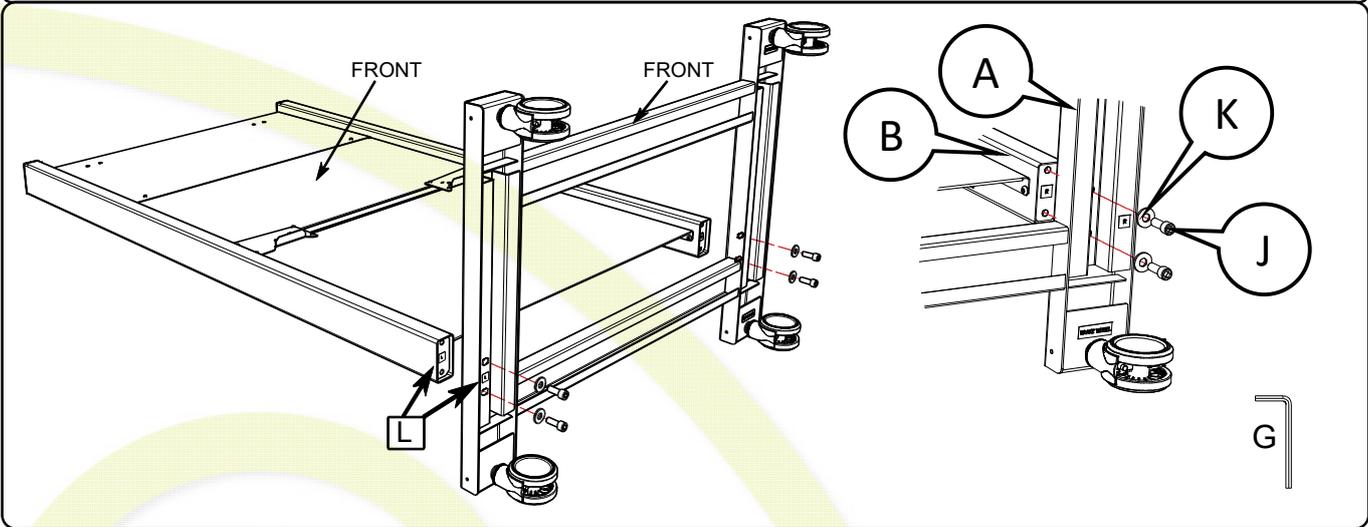



4 Assemble the handle to the frame (● 5 mm)

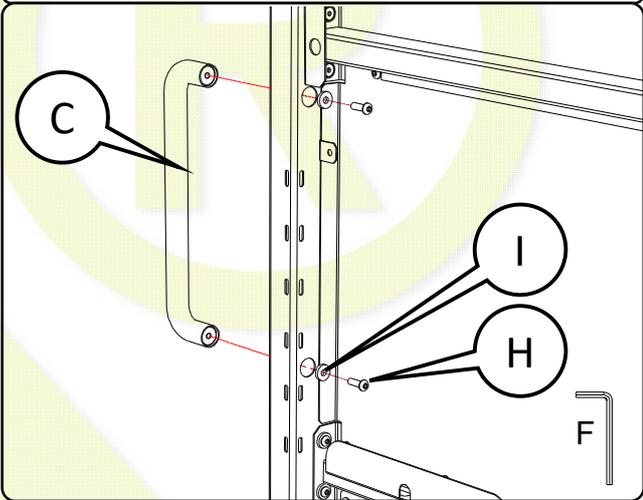

5 Mount the BalanceBox®650 wall bracket to the frame as shown (● 5 mm)

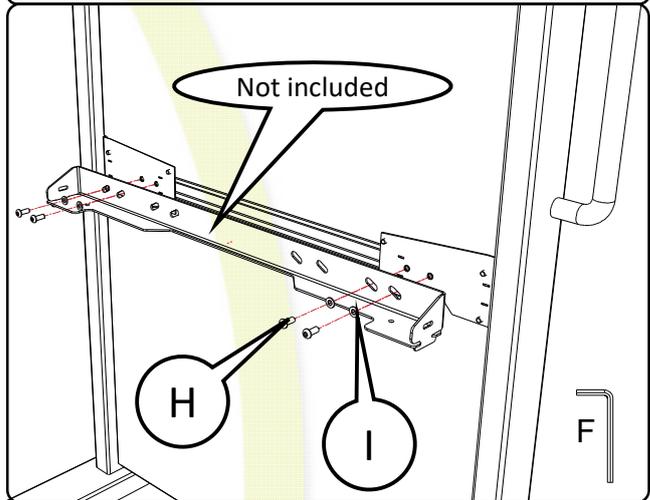

6 Mount the BalanceBox®650 on the wall bracket and assemble the screws at the top (● 5 mm)

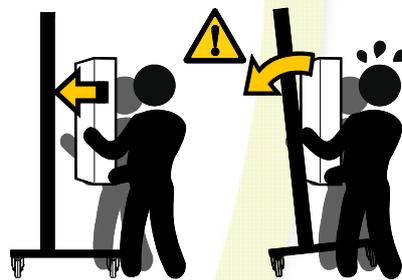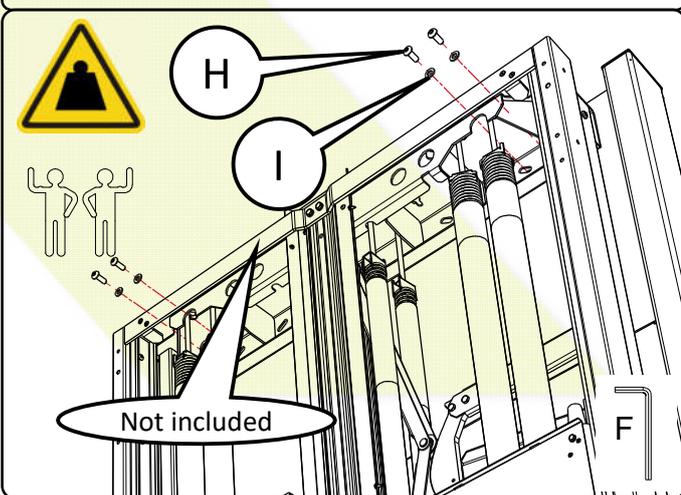


CAUTION
MOBILE STAND IS UNSTABLE IN BACKWARD DIRECTION DURING INSTALL



NOTE:
REFER TO BALANCEBOX® 650 INSTALLATION MANUAL TO CONTINUE

BalanceBox®650 and the wall bracket are not included with the Mobile stand 481A50

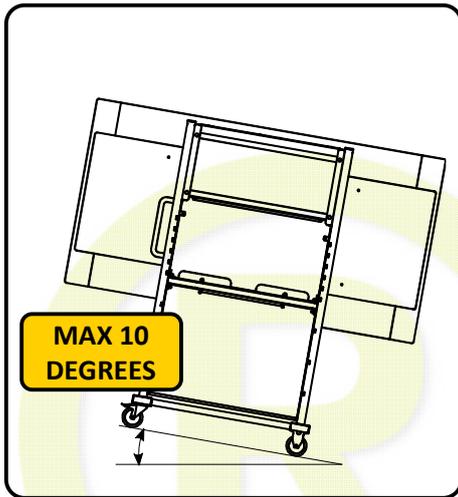

WARNING MAXIMUM SLOPE



WARNING DO NOT PULL DOWN SLOPE



STAY ABOVE CART WHEN MOVING DOWN SLOPE

ALWAYS USE THE HANDLE WITH BOTH HANDS TO MOVE THE CART



CAUTION

This cart is intended for use with a BalanceBox® height adjustable mount and flat screen or touchscreen TV or Interactive whiteboard weighing not more than:

372 Lbs (169 kg).

Use with other products may result in instability causing possible injury.



CAUTION

“This cart is Intended for use only with the maximum weights indicated. Use with products heavier than the maximum weights indicated may result in instability causing possible injury.”